



# INSTALLATION GUIDE

2009-2014


**FORD F-150  
PROJECTOR HEADLIGHTS**

## Tool required :

- 10mm Socket Wrench/Ratchet
- Phillips-Head Driver




If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, professional installation is highly recommended.

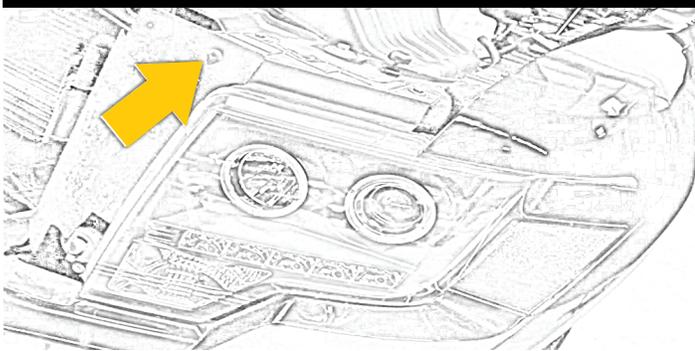


### Step 1

Lift the hood. Using your Phillips screwdriver, remove the Phillips screw securing the headlight shroud.

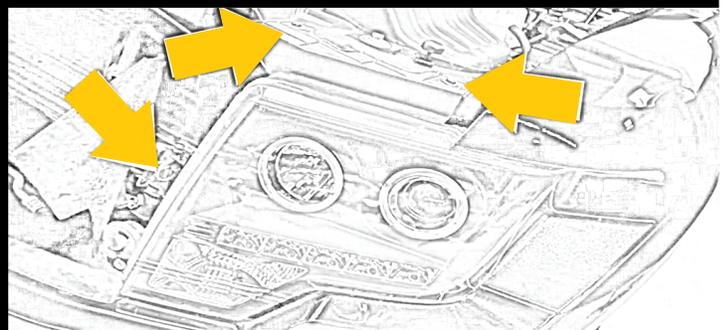


### Step 2

Fold back the shroud and unscrew the 10mm bolt behind it, as well as the 10mm nuts (2 total). Keep them for later.

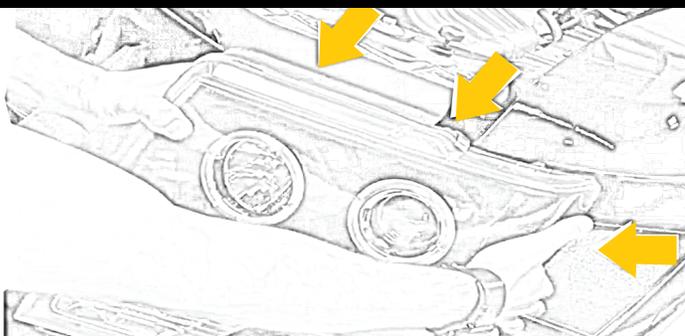

### Step 3

Holding the stock headlight from the back, tug it gently outwards. Disconnect the harness from the headlight. Keep the side marker light and turn signal light for later. Set the stock headlights aside.

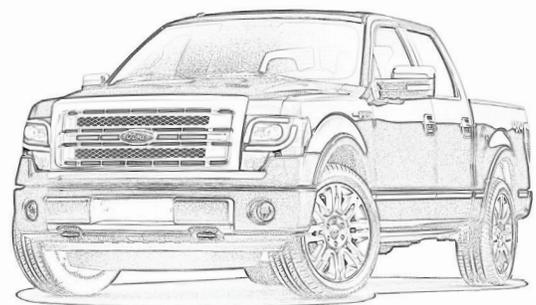

### Step 4

Reconnect the harness to your REX headlight, replacing the nuts, bolt, and screw that you removed earlier. Shut the hood – your Ford F150 is now equipped with REX headlights!



## **Disclaimer**

REX Lighting is not liable for damages, injuries, or death while installing the product. The Installation Guide is intended as assistance to reduce installation time. REX Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional installation.