



INSTALLATION GUIDE

2007-2013

**CHEVROLET SILVERADO
1500 TAIL LIGHTS**

2007-2014

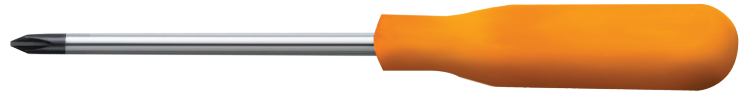
**CHEVROLET SILVERADO
2500HD/3500HD TAIL LIGHTS**

2007-2014

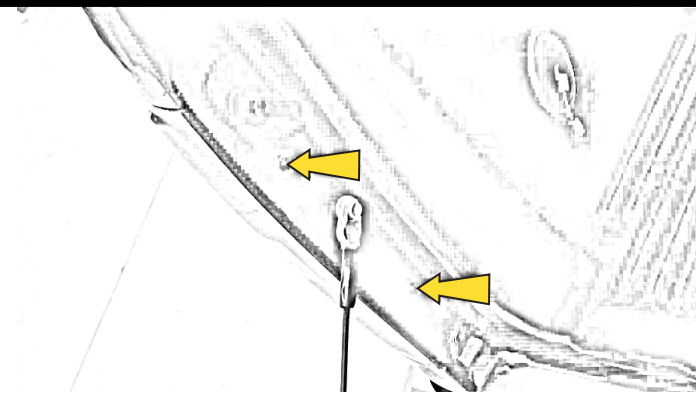
**GMC SIERRA
3500HD TAIL LIGHTS**

Tool required :

- Phillips Screwdriver



If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, professional installation is highly recommended.



Step 1

Open the tailgate, and remove the Phillips screws holding the stock tail light (2 total).



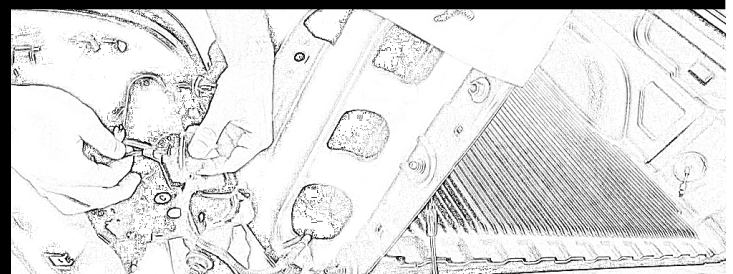
Step 2

Unseat the stock tail light, and remove the bulb sockets from the housing (3 total), setting them aside for later.



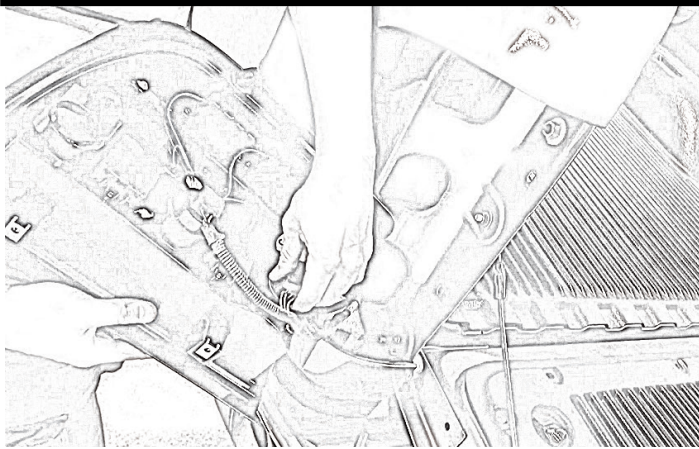
Step 3

Remove the bulb from the bottom socket of the stock tail light harness, and push the socket behind your bumper since you will no longer need it.

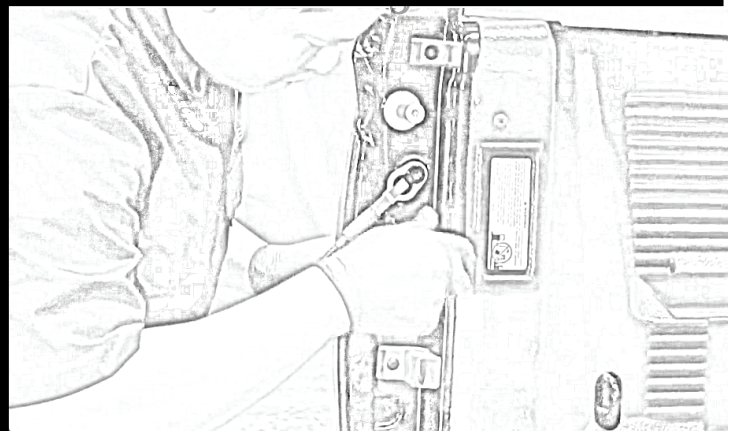


Step 4

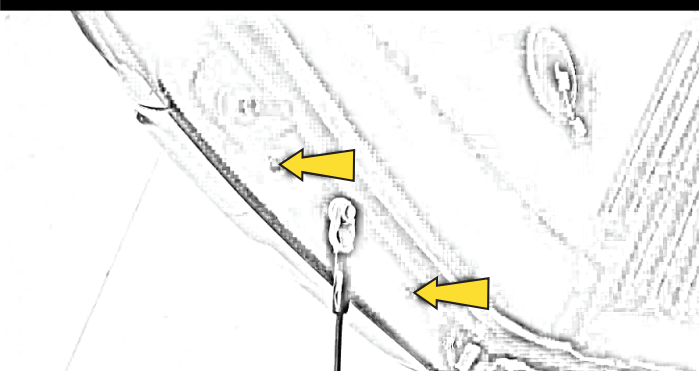
Remove the bulb from the brake lamp socket on top, and connect the REX tail light's insert harness into the empty socket. Ensure that the black wires on both sides of the harness line up – incorrect connection on this step can cause severe damage to your lights and void your warranty.

**Step 5**

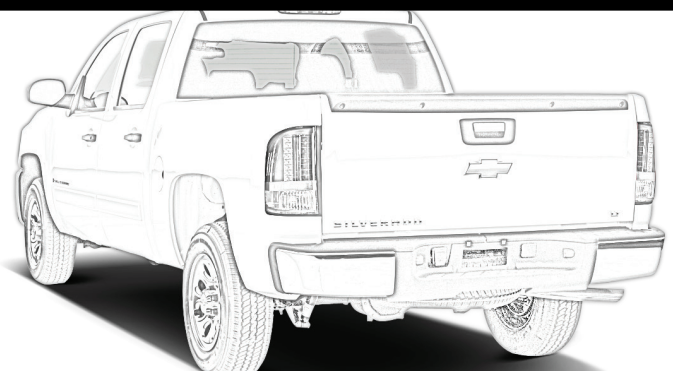
Install the reverse lamp socket.

**Step 6**

Once all wires have been connected, seat the REX tail light in your vehicle.

**Step 7**

Reinstall the Phillips screws (2 total) to secure the REX tail light properly

**Step 6**

Congratulations! Your Chevy Silverado has now been equipped with REX tail lights.



Disclaimer

REX Lighting is not liable for damages, injuries, or death while installing the product. The Installation Guide is intended as assistance to reduce installation time. REX Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional installation.