



# INSTALLATION GUIDE

2014-2017

TOYOTA TUNDRA  
PROJECTOR HEADLIGHTS

## Tool required :

- Pry Tool
- Socket Wrench Set



If you are inexperienced with aftermarket installations, professional installation is highly recommended.



### Step 1

Prop open the hood of your Toyota Tundra, and remove the silver 10mm bolts on top of the grille (4 bolts total).



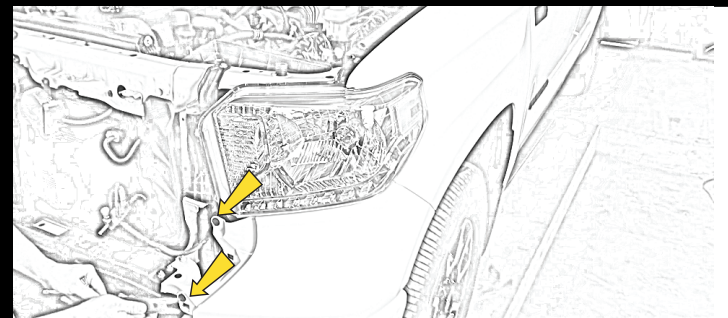
### Step 2

Release the black clips (2 clips total).



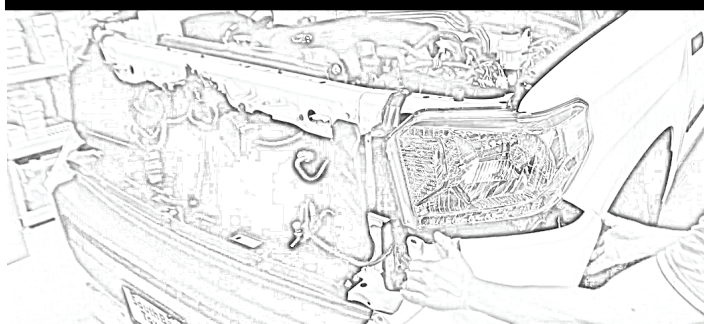
### Step 3

Remove the grille by carefully pulling the top forward first, followed by the bottom.



### Step 4

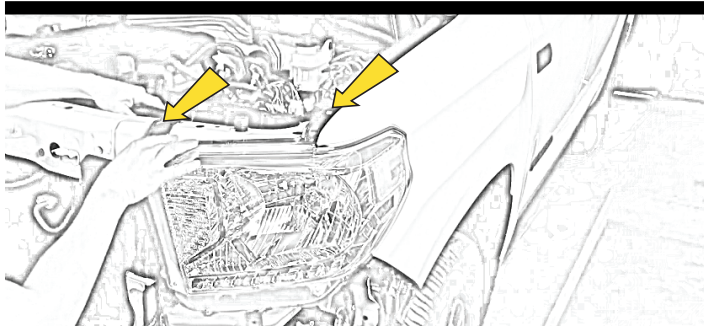
Remove the black clips from the trim piece (2 clips total).

**Step 5**

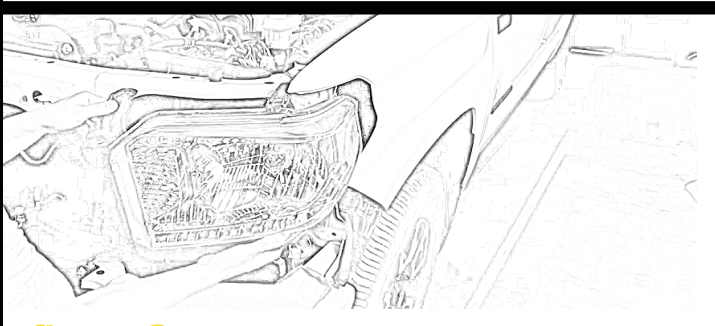
Remove the trim piece by pulling it outwards and to the side.

**Step 6**

Remove the bolts that secure the stock headlight housing to the vehicle frame (3 bolts total).

**Step 7**

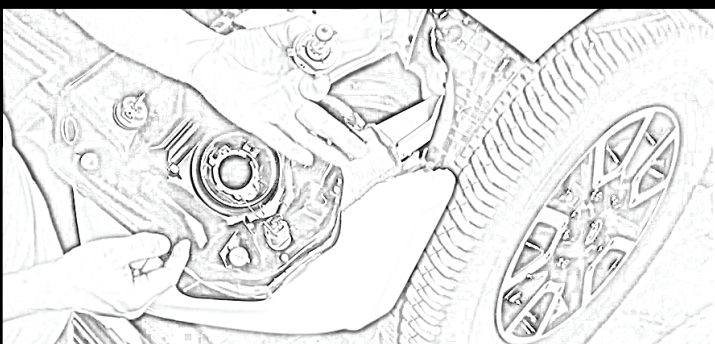
Release the black clips (2 clips total).

**Step 8**

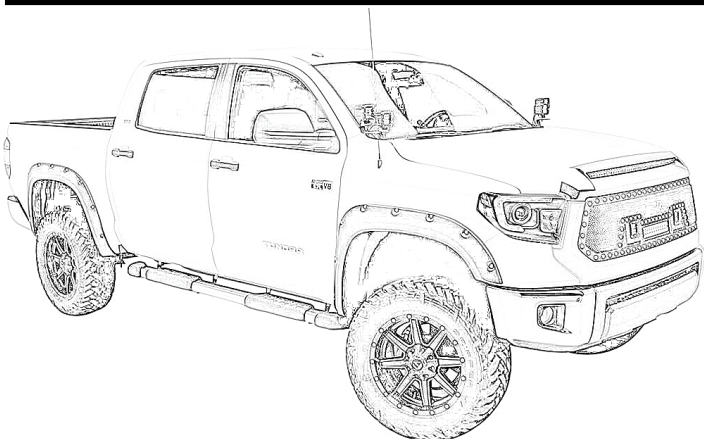
Remove the stock headlight by carefully tugging it upward and forward.

**Step 9**

Detach the headlight connector, and remove the dust cap from the stock headlight.

**Step 10**

On the back of the stock headlight, undo the wire lock securing the bulb. Remove the bulb.

**Step 11**

Re-install the bulb into the back of your new REX headlight, along with the dust cap and headlight connector, and seat the REX headlight into your vehicle. Secure by replacing all car parts in reverse order.



## **Disclaimer**

REX Lighting is not liable for damages, injuries, or death while installing the product. The Installation Guide is intended as assistance to reduce installation time. REX Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional installation.